



# **Corticosterone ELISA Kit Instructions**

***Please read all instructions carefully before beginning this assay***

**PRODUCT #402810**

**For Research Use Only**

**\*\*\*Store kit at 4°C at all times\*\*\***

**Do not freeze kit components**

## **DESCRIPTION**

Corticosterone is a glucocorticoid secreted by the adrenal cortex in response to stress. Glucocorticoids are also essential for proper metabolism of fats, proteins, and carbohydrates in the body. While cortisol and corticosterone are both produced in response to stress in humans, corticosterone is the predominant glucocorticoid produced in mice and rats. Corticosterone has also been used as a predictor of stress in a variety of wild animals. In particular corticosterone levels were increased in Galapagos marine iguanas under famine conditions brought on by El Nino<sup>1</sup>. While not always predictive of environmental stress in the wild<sup>2</sup>, conditions such as starvation, rapid temperature change, or changes in daily routine can cause increased corticosterone levels in laboratory mice and rats.


Corticosterone is also administered to treat inflammation because like many other steroids, it is a powerful anti-inflammatory agent.

## **PRINCIPLE OF ASSAY**

This is an ELISA (Enzyme-Linked ImmunoSorbent Assay) for the quantitative analysis of Corticosterone levels in biological fluid. This test kit operates on the basis of competition between the enzyme conjugate and the Corticosterone in the sample for a limited number of binding sites on the antibody coated plate.

The sample or standard solution is first added to the microplate. Next, the diluted enzyme conjugate is added and the mixture is shaken and incubated at room temperature for one hour. During the incubation, competition for binding sites is taking place. The plate is then washed removing all the unbound material. The bound enzyme conjugate is detected by the addition of substrate which generates an optimal color after 30 minutes. Quantitative test results may be obtained by measuring and comparing the absorbance reading of the wells of the samples against the standards with a microplate reader at 650 nm. The extent of color development is inversely proportional to the amount of Corticosterone in the sample or standard. For example, the absence of Corticosterone in the sample will result in a bright blue color, whereas the presence of Corticosterone will result in decreased or no color development.

## PRINCIPLE OF ASSAY (continued)

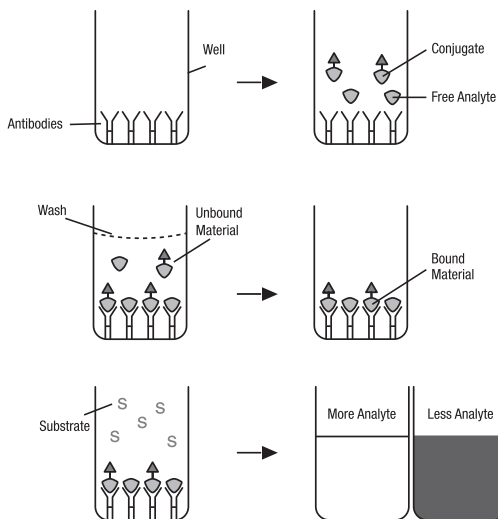

## MATERIALS PROVIDED

1. **EIA BUFFER:** 30 mL. Provided to dilute enzyme conjugate and Corticosterone standards.
2. **WASH BUFFER (10X):** 20 mL. Dilute 10-fold with deionized water. Diluted wash buffer is used to wash all unbound enzyme conjugate, samples and standards from the plate after the one hour incubation.
3. **SUBSTRATE:** 20 mL. Stabilized 3,3', 5,5' Tetramethylbenzidine (TMB) plus Hydrogen Peroxide ( $H_2O_2$ ) in a single bottle. It is used to develop the color in the wells after they have been washed. Keep substrate refrigerated. **LIGHT SENSITIVE.**
4. **EXTRACTION BUFFER (5X):** 30 mL. Dilute 5-fold with deionized water. This buffer is used for diluting extracted and non-extracted samples.
5. **CORTICOSTERONE ENZYME CONJUGATE:** 150  $\mu$ L. Corticosterone horseradish peroxidase concentrate. Blue capped vial.
6. **CORTICOSTERONE STANDARD:** 100  $\mu$ L. Corticosterone standard provided at the concentration of 1  $\mu$ g/mL in methanol. Green capped vial.
7. **CORTICOSTERONE ANTIBODY COATED PLATE:** A 96 well Costar™ microplate with anti-Corticosterone rabbit antibody precoated on each well. The plate is ready for use as is. **DO NOT WASH!**

## MATERIALS NEEDED BUT NOT PROVIDED

1. 300 mL deionized water to dilute wash buffer and extraction buffer.
  2. Precision pipettes that range from 10  $\mu$ L-1000  $\mu$ L and disposable tips.
- NOTE: If all or several strips are to be used at one time, it is suggested that a multichannel pipette be used.**
3. Clean test tubes used to dilute the standards and conjugate.
  4. Graduated cylinders to dilute and mix wash buffer and extraction buffer.
  5. Microplate reader with 650 nm filter.
  6. Plastic film or plate cover to cover plate during incubation.

## OPTIONAL MATERIALS:

7. 1 N HCl or Neogen's Red Stop Solution.
8. Microplate shaker.

If performing an extraction on samples, the following will be required:

9. Ethyl ether
10. Nitrogen gas
11. Vortex

## WARNINGS AND PRECAUTIONS

1. **DO NOT** use components beyond expiration date.
2. **DO NOT** mix any reagents or components of this kit with any reagents or components of any other kit. This kit is designed to work properly as provided.
3. **DO NOT** pipette reagents by mouth.
4. Always pour substrate out of the bottle into a clean test tube. **DO NOT** pipette out of the bottle. If the pipette tip is unclean this could result in contamination of the substrate.
5. All specimens should be considered potentially infectious. Exercise proper handling precautions.
6. **DO NOT** smoke, eat or drink in areas where specimens or reagents are being handled.
7. Use aseptic technique when opening and removing reagents from vials and bottles.
8. Keep plate covered except when adding reagents, washing or reading.
9. Kit components should be refrigerated at all times when not in use.

## PROCEDURAL NOTES

1. It is not necessary to allow reagents to warm to room temperature before use.
2. Desiccant bag must remain in foil pouch with unused strips. Keep pouch sealed when not in use to maintain a dry environment. Seal with a heat sealer. If a heat sealer is not available, thoroughly close the open end with tape. Remove excess air before sealing.
3. Always use new pipette tips to pipette buffer, enzyme conjugate, standards and samples.
4. Before pipetting a reagent, rinse the pipette tip three times with that reagent (i.e. fill the tip with the desired amount of reagent and dispense back into the same vial. Repeat 2 times). Now the tip is properly rinsed and ready to dispense the reagent into your well or test tube.
5. When pipetting into the wells, **DO NOT** allow the pipette tip to touch the inside of the well, or any of the reagents already in the well. This can result in cross contamination.
6. Standards and samples should be assayed in duplicate.
7. To quantitate, always run samples alongside a standard curve. If testing a sample that is not extracted, standards should be diluted in the same type of medium being tested. This medium should be known to be negative.
8. Gently mix specimens and reagents before use. Avoid vigorous agitation.
9. When using only partial amounts of a kit, it is recommended to transfer the appropriate volume of each reagent to a clean vessel for repeated dispensing. This will reduce reagent contamination caused by repeated sampling from the original container.
10. The enzyme conjugate is most stable in its concentrated form. Dilute only the volume necessary for the amount of strips currently being used.
11. Before taking an absorbance reading wipe the outside bottom of the wells with a lint-free wiper to remove dust and fingerprints.
12. Before opening the enzyme conjugate and standard vial, tap vial in an upright position to remove any liquid in the cap.

## SAMPLE PREPARATION

This assay is non-species specific. Usually, urine and tissue culture supernatant can be assayed directly by diluting them with the diluted extraction buffer. Plasma and most other mediums will need to be extracted.

### EXTRACTION OF CORTICOSTERONE

1. Pipette 100  $\mu\text{L}$  of plasma into a glass tube (10x75 mm) and add 1 mL of ethyl ether.
2. Vortex the tube for 30 seconds and then allow the phases to separate.
3. Transfer the organic phase into a clean glass tube and evaporate the solvent with a stream of  $\text{N}_2$ .
4. Dissolve the residue in 100  $\mu\text{L}$  of diluted extraction buffer.
5. Dilute the extract 100-fold by adding 10  $\mu\text{L}$  of the above extract into 990  $\mu\text{L}$  of diluted extraction buffer.
6. Vortex and assay 50  $\mu\text{L}$  in duplicates.
7. The values obtained are multiplied by 100 to give final ng/mL concentrations. If additional dilution is necessary, values must be multiplied by the additional dilution factor in order to calculate final ng/mL concentration.
8. If the concentration is higher than the high range of the standard curve, the samples in #6 need to be further diluted and reassayed.

**NOTE:** *Extraction buffer must be diluted 5-fold with deionized water before use. Any precipitant present must be brought into solution before dilution.*

## TEST PROCEDURES

1. Prepare standards as follows:

<i>Standard</i>	<i>Preparation</i>
A	stock solution 1 $\mu\text{g/mL}$ (Provided in green capped vial)
B	take 20 $\mu\text{L}$ of A, add to 980 $\mu\text{L}$ of EIA buffer and mix=20 ng/mL
C	take 200 $\mu\text{L}$ of B, add to 1.8 mL of EIA buffer and mix=2 ng/mL
D	take 200 $\mu\text{L}$ of C, add to 1.8 mL of EIA buffer and mix=0.2 ng/mL

*Continue standard preparation following Scheme I.*

### SCHEME I

<i>Standards</i>	<i>ng/mL</i>	<i>EIA buffer (<math>\mu\text{L}</math> added)</i>	<i>B standard <math>\mu\text{L}</math></i>	<i>C standard <math>\mu\text{L}</math></i>	<i>D standard <math>\mu\text{L}</math></i>
$S_0$	0	as is	-	-	-
$S_1$	0.05	750	-	-	250
$S_2$	0.1	500	-	-	500
$S_3$	0.2	-	-	-	as is
$S_4$	0.5	750	-	250	-
$S_5$	1	500	-	500	-
$S_6$	2	-	-	as is	-
$S_7$	5	750	250	-	-

- Determine the number of wells to be used.
- Dilute the Corticosterone enzyme conjugate. Add 1  $\mu\text{L}$  of enzyme conjugate into 50  $\mu\text{L}$  total volume of EIA buffer for each well assayed. For the whole plate, add 110  $\mu\text{L}$  of the enzyme conjugate into 5.5 mL total volume of EIA buffer. Mix the solution thoroughly.
- Add 50  $\mu\text{L}$  of standards (S) or unknown (U) (some samples may require diluting) to the appropriate wells in duplicate.

**See Scheme II for suggested template design.**

- Add 50  $\mu\text{L}$  of the diluted enzyme conjugate to each well. Use 8-channel pipette or 12-channel pipette for rapid addition.
- Mix by shaking plate gently. A microplate shaker may be used.
- Cover plate with plastic film or plate cover and incubate at room temperature for one hour. Note: Keep plate away from drafts and temperature fluctuations.
- Dilute concentrated wash buffer with deionized water (i.e. 20 mL of wash buffer plus 180 mL of deionized water). Mix thoroughly.
- After incubation, dump out the contents of the plate. Tap out contents thoroughly on a clean lint-free towel.
- Wash each well with 300  $\mu\text{L}$  of the diluted wash buffer. Repeat for a total of three washings. An automated plate washer can be used, however, increase wash cycles from three to five.
- Add 150  $\mu\text{L}$  of substrate to each well. Use multichannel pipette for best results. Mix by shaking plate gently.
- Incubate at room temperature for 30 minutes.
- Gently shake plate before taking a reading to ensure uniform color throughout each well.
- Plate is read in a microplate reader at 650 nm. If a dual wavelength is used, set  $W_1$  at 650 nm and  $W_2$  at 490 nm.
- If accounting for substrate background, use 2 to 8 wells as blanks with only substrate in the wells (150  $\mu\text{L}$ /well). Subtract the average of these absorbance values from the absorbance values of the wells being assayed.

**NOTE:** *Some microplate readers can be programmed to do these subtractions automatically when reading the plate. Consult your instrument manual.*

### OPTIONAL TEST PROCEDURES

- Add 50-100  $\mu\text{L}$  of 1 N HCl or Neogen's Red Stop Solution to each well to stop enzyme reaction.
- Read plate at 450 nm, if 1N HCl solution was used. Read plate at 650 nm, if Neogen's Red Stop Solution was used.
- Plot the standard curve and estimate the concentrations of the samples from the curve. See "CALCULATIONS."

**NOTE:** *Absorbance readings will approximately double when stopped with acid. If absorbance readings are too high for measuring with your microplate reader, decrease the substrate incubation by approximately 10 minutes but no more than 15 minutes.*

## SCHEME II


	1	2	3	4	5	6	7	8	9	10	11	12
<b>A</b>	<sup>s</sup> 0	<sup>s</sup> 0	<sup>u</sup> 1	<sup>u</sup> 1	<sup>u</sup> 9	<sup>u</sup> 9	<sup>u</sup> 17	<sup>u</sup> 17	<sup>u</sup> 25	<sup>u</sup> 25	<sup>u</sup> 33	<sup>u</sup> 33
<b>B</b>	<sup>s</sup> 1	<sup>s</sup> 1	<sup>u</sup> 2	<sup>u</sup> 2	<sup>u</sup> 10	<sup>u</sup> 10	<sup>u</sup> 18	<sup>u</sup> 18	<sup>u</sup> 26	<sup>u</sup> 26	<sup>u</sup> 34	<sup>u</sup> 34
<b>C</b>	<sup>s</sup> 2	<sup>s</sup> 2	<sup>u</sup> 3	<sup>u</sup> 3	<sup>u</sup> 11	<sup>u</sup> 11	<sup>u</sup> 19	<sup>u</sup> 19	<sup>u</sup> 27	<sup>u</sup> 27	<sup>u</sup> 35	<sup>u</sup> 35
<b>D</b>	<sup>s</sup> 3	<sup>s</sup> 3	<sup>u</sup> 4	<sup>u</sup> 4	<sup>u</sup> 12	<sup>u</sup> 12	<sup>u</sup> 20	<sup>u</sup> 20	<sup>u</sup> 28	<sup>u</sup> 28	<sup>u</sup> 36	<sup>u</sup> 36
<b>E</b>	<sup>s</sup> 4	<sup>s</sup> 4	<sup>u</sup> 5	<sup>u</sup> 5	<sup>u</sup> 13	<sup>u</sup> 13	<sup>u</sup> 21	<sup>u</sup> 21	<sup>u</sup> 29	<sup>u</sup> 29	<sup>u</sup> 37	<sup>u</sup> 37
<b>F</b>	<sup>s</sup> 5	<sup>s</sup> 5	<sup>u</sup> 6	<sup>u</sup> 6	<sup>u</sup> 14	<sup>u</sup> 14	<sup>u</sup> 22	<sup>u</sup> 22	<sup>u</sup> 30	<sup>u</sup> 30	<sup>u</sup> 38	<sup>u</sup> 38
<b>G</b>	<sup>s</sup> 6	<sup>s</sup> 6	<sup>u</sup> 7	<sup>u</sup> 7	<sup>u</sup> 15	<sup>u</sup> 15	<sup>u</sup> 23	<sup>u</sup> 23	<sup>u</sup> 31	<sup>u</sup> 31	<sup>u</sup> 39	<sup>u</sup> 39
<b>H</b>	<sup>s</sup> 7	<sup>s</sup> 7	<sup>u</sup> 8	<sup>u</sup> 8	<sup>u</sup> 16	<sup>u</sup> 16	<sup>u</sup> 24	<sup>u</sup> 24	<sup>u</sup> 32	<sup>u</sup> 32	<sup>u</sup> 40	<sup>u</sup> 40

## CALCULATIONS

1. After the substrate background has been subtracted from all absorbance values, average all of your duplicate well absorbance values.
2. The average of your two  $S_0$  values is now your  $B_0$  value. ( $S_1$  now becomes  $B_1$ , etc.)
3. Next, find the percent of maximal binding ( $\%B/B_0$  value). To do this, divide the averages of each standard absorbance value (now known as  $B_1$  through  $B_n$ ) by the  $B_0$  absorbance value and multiply by 100 to achieve percentages.
4. Graph your standard curve by plotting the  $\%B/B_0$  for each standard concentration on the ordinate (y) axis against concentration on the abscissa (x) axis. Draw a curve by using a curve-fitting routine (i.e. 4-parameter or linear regression).
5. Divide the averages of each sample absorbance value by the  $B_0$  value and multiply by 100 to achieve percentages.
6. Using the standard curve, the concentration of each sample can be determined by comparing the  $\%B/B_0$  of each sample to the corresponding concentration of Corticosterone standard.
7. If the samples were diluted, the concentration determined from the standard curve must be multiplied by the dilution factor.

## TYPICAL STANDARD CURVE

Corticosterone in EIA Buffer

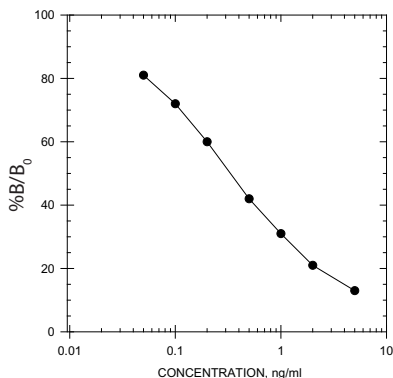

## TYPICAL DATA

**NOTE:** "Typical data" is a representation. Variances in data will occur. Optical density readings may fluctuate during the shelf-life of the kit, but the %B/B<sub>0</sub> should remain comparable. Measuring wavelength: 650 nm

Standard	Standard Concentration (ng/mL)	Optical Density (Absorbance Value)	%B/B <sub>0</sub>
S <sub>0</sub> (B <sub>0</sub> )	0	1.270	100
S <sub>1</sub> (B <sub>1</sub> )	0.05	1.112	81
S <sub>2</sub> (B <sub>2</sub> )	0.1	0.991	72
S <sub>3</sub> (B <sub>3</sub> )	0.2	0.827	60
S <sub>4</sub> (B <sub>4</sub> )	0.5	0.591	42
S <sub>5</sub> (B <sub>5</sub> )	1	0.425	31
S <sub>6</sub> (B <sub>6</sub> )	2	0.285	21
S <sub>7</sub> (B <sub>7</sub> )	5	0.171	13

## CROSS REACTIVITY

CORTICOSTERONE.....	100.0%
DEOXYCORTICOSTERONE.....	38%
6-HYDROXYCORTICOSTERONE.....	19%
PROGESTERONE.....	5.1%
TETRAHYDROCORTICOSTERONE.....	2.7%
PREDNISOLONE.....	1.5%
CORTISOL.....	1.1%
PREGNENOLONE.....	0.85%
11-EPICORTICOSTERONE.....	0.78%
CORTISONE.....	0.27%
21-DESOXYCORTISOL.....	0.24%
d-ALDOSTERONE.....	0.13%
TESTOSTERONE.....	0.12%
17α-HYDROXYPROGESTERONE.....	0.12%
PREDNISON.....	0.10%
DEXAMETHASONE.....	0.03%
CHOLESTEROL.....	<0.01%
ESTRADIOL.....	<0.01%
ESTRIOL.....	<0.01%

## REFERENCES

1. Romero, Michael and Wokelski, M. Corticosterone levels predict survival probabilities of Galapagos marine iguanas during El Nino events. Proceedings of the National Academy of Sciences. 98, 13, 7366-7370 (2001).
2. Lanctot, R., et al. Are Corticosterone Levels a good indicator of food stress and reproductive success in a seabird colony? Abstract [http://www.absc.usgs.gov/research/sis\\_summaries/seabirds\\_sis/PSG\\_abst.htm](http://www.absc.usgs.gov/research/sis_summaries/seabirds_sis/PSG_abst.htm)

## **COPYRIGHT**

All rights reserved worldwide. No part of this publication may be reproduced, transmitted, transcribed, or stored in any information-retrieval system, or translated into any human or computer language in any form or by any means (manual, electronic, mechanical, magnetic, optical, chemical, or otherwise) without expressed written permission.

## **WARRANTY**

Neogen Corporation makes no warranty of any kind, either expressed or implied, except that the material from which its products are made are of standard quality. If any materials are defective, Neogen Corporation will provide a replacement product. Buyer assumes all risk and liability resulting from the use of this product and any of the predictive models. There is no warranty of merchantability of this product, or of the fitness of the product for any purpose. Neogen Corporation shall not be liable for any damages, including special or consequential damage, or expense arising directly or indirectly from the use of this product.

## **TECHNICAL ASSISTANCE**

Technical assistance is available Monday-Friday, between 8:00 a.m. and 6:00 p.m. EST.



944 Nandino Blvd • Lexington KY 40511-1205 USA  
859/254-1221 or 800/477-8201 USA/CANADA  
Fax: 859/255-5532 • email: [inform@neogen.com](mailto:inform@neogen.com)